



ASSEMBLE THE MARK-RITE TOOL



1. ATTACH THE TWO SIDES OF FRAME TO BASE USING THE FOUR WING BOLTS.

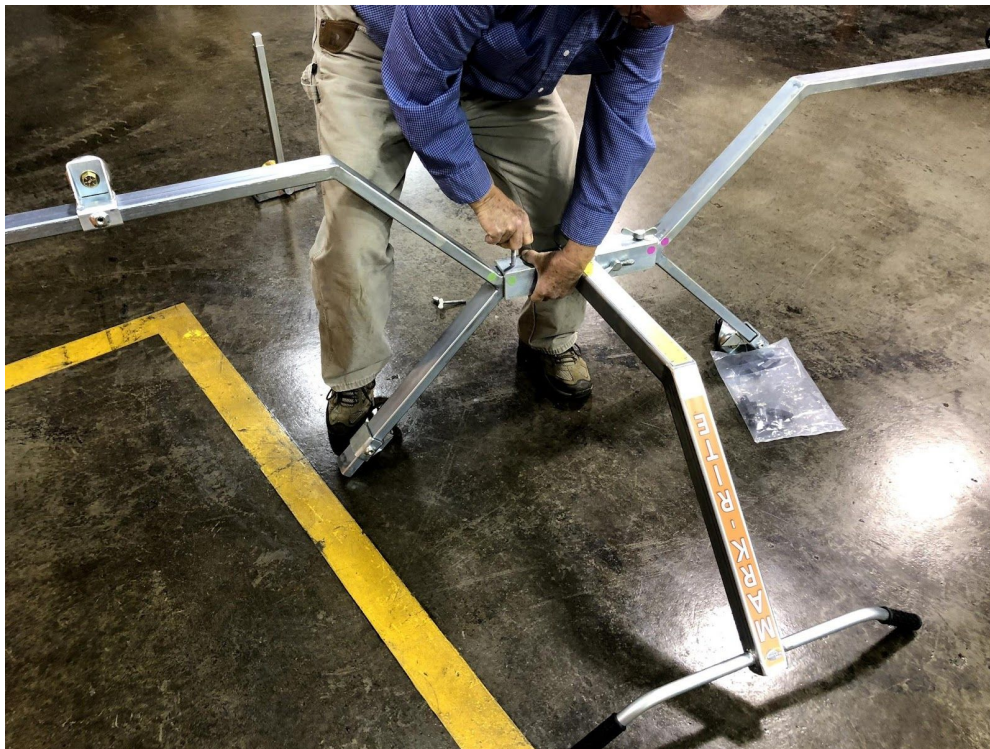

2. INSERT THE MARKING HEAD ALL THE WAY AND SECURE WITH A PLASTIC TEE BOLT

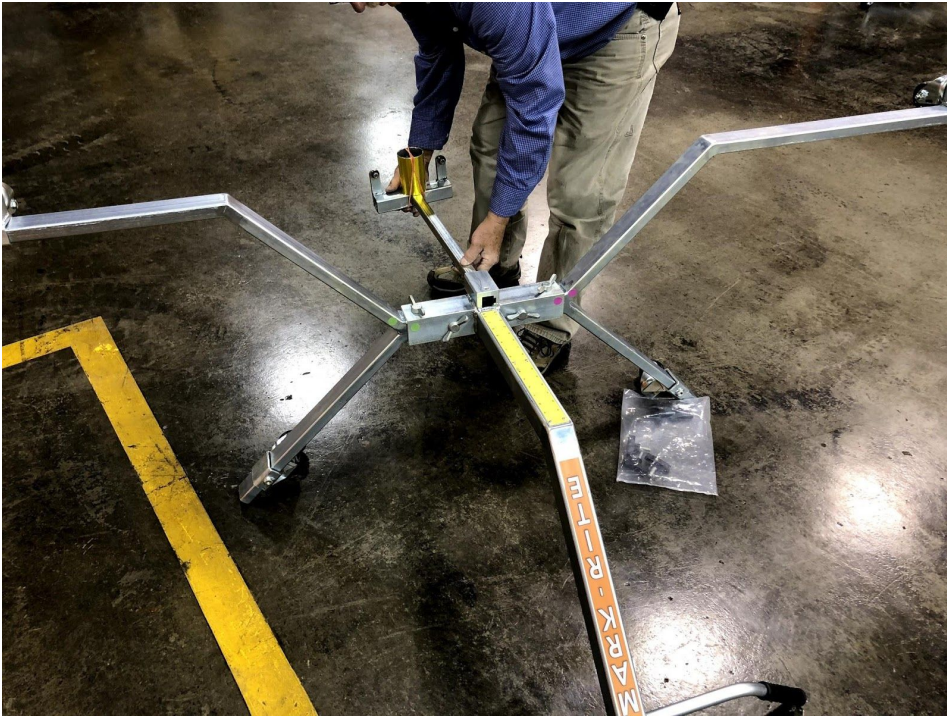

3. INSERT THE PLASTIC TEE BOLTS IN THE WHEELS



4. REMOVE PROTECTIVE SLEEVE FROM MARKING HEAD.

